


**X unit**  
L 1350, D 1350, H 450, SH 450



**T unit**  
L 1350, D 900, H 450, SH 450

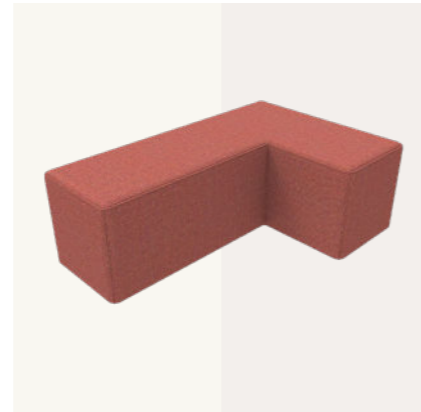

**L unit**  
L 1350, D 900, H 450, SH 450



**Cube**  
L 450, D 450, H 450, SH 450



**2 seat bench**  
L 900, D 450, H 450, SH 450



**3 seat bench**  
L 1350, D 450, H 450, SH 450



**Drum**  
DIA 450, H 450, SH 450



## Power Options

To make the most of the time with Edam, various power options can be added to ensure you are fully topped up on your laptop / mobile device, allowing you to video call for hours on end.



A single plug is needed to power Edam - the power cables are 2m long and can be plugged into a floor box underneath or a nearby wall plug



## What's it made from?

FSC @ certified (FSC-C109654) birch plywood,  
FSC @ certified (FSC-C109654) Beech  
Polyurethane foam,  
Powdercoated mild steel,







## Fabric Bands

Band 1	Band 2	Band 3	Band 4	Band 5	Band 6	Band 7
<a href="#">Camira Era</a>	<a href="#">Camira Mainline Flax</a>	<a href="#">Camira Blazer</a>	<a href="#">Camira Craggan</a>	<a href="#">Bute Alchemy</a>	<a href="#">Bute Coast</a>	<a href="#">Bute Melrose</a>
<a href="#">Camira Urban</a>	<a href="#">Camira Mainline</a>	<a href="#">Camira Synergy</a>	<a href="#">Camira Craggan Flax</a>	<a href="#">Bute Elgin</a>	<a href="#">Bute Tweed</a>	<a href="#">Deploeg Acre</a>
<a href="#">Camira Château</a>	<a href="#">Camira Honeycomb</a>	<a href="#">Camira Hemp</a>	<a href="#">Camira Code</a>	<a href="#">Bute Ramshead</a>	<a href="#">Bute Lewis</a>	<a href="#">Deploeg Sugar</a>
<a href="#">Camira Xtreme</a>	<a href="#">Camira Aspect</a>	<a href="#">Camira Landscape</a>	<a href="#">Camira Individuo</a>	<a href="#">Bute Troon</a>	<a href="#">Camira Synergy Quilt Channel</a>	<a href="#">Kvadrat Divina3</a>
<a href="#">Camira X2</a>	<a href="#">Camira Patina</a>	<a href="#">Camira 24/7 Flax</a>	<a href="#">Camira Yoredale</a>	<a href="#">Bute Turnberry</a>	<a href="#">Camira Synergy Quilt Chevron</a>	<a href="#">Panaz Purdey</a>
<a href="#">Camira Gravity</a>	<a href="#">Camira Manila</a>	<a href="#">Camira Aquarius</a>	<a href="#">Fidivi Corte</a>	<a href="#">Camira Zap</a>	<a href="#">Camira Synergy Quilt Hourglass</a>	<a href="#">Svensson Balance</a>
<a href="#">Camira Canopy</a>	<a href="#">Fidivi Bondai Linea 30</a>	<a href="#">Camira Regent</a>	<a href="#">Fidivi Goal Unito</a>	<a href="#">Camira Armadillo</a>	<a href="#">Deploeg Walker</a>	<a href="#">Svensson Club</a>
<a href="#">Camira Rivet</a>	<a href="#">Fidivi King Flex</a>	<a href="#">Camira Mainline Flax Stripe</a>	<a href="#">Kvadrat Canvas</a>	<a href="#">Deploeg Stavanger</a>	<a href="#">Fidivi Vogue</a>	<a href="#">Svensson Debut</a>
<a href="#">Camira Manhattan</a>	<a href="#">Fidivi One</a>	<a href="#">Camira Silk</a>	<a href="#">Kvadrat Clara 2</a>	<a href="#">Fidivi Terra</a>	<a href="#">Kvadrat Re-wool</a>	<a href="#">Vescom Ariana</a>
<a href="#">Camira Vita</a>	<a href="#">Fidivi Riva</a>	<a href="#">Camira Blazer Lite</a>	<a href="#">Kvadrat Field</a>	<a href="#">Kvadrat Canvas</a>	<a href="#">Kvadrat Steelcut 2</a>	<a href="#">Yarwood Chelsea*</a>
<a href="#">Camira Era 170</a>	<a href="#">Fidivi Roccia</a>	<a href="#">Camira Synergy 170</a>	<a href="#">Kvadrat Melange Nap</a>	<a href="#">Ultrafabrics Ultraleather Pro</a>	<a href="#">Kvadrat Steelcut trio 2</a>	<a href="#">Yarwood Camden*</a>
<a href="#">Fidivi Alba</a>	<a href="#">Panaz Linear</a>	<a href="#">Camira Oceanic</a>	<a href="#">Kvadrat Floyd</a>	<a href="#">Ultrafabrics Brisa</a>	<a href="#">Svensson Kent</a>	
<a href="#">Fidivi Bondai</a>	<a href="#">Panaz Microvelle</a>	<a href="#">Camira Sumi</a>	<a href="#">Ultrafabrics Ultraleather</a>	<a href="#">Ultrafabrics Tottori</a>	<a href="#">Svensson Moss</a>	
<a href="#">Fidivi Erika</a>	<a href="#">Panaz Ultimate Touch</a>	<a href="#">Fidivi Fox</a>	<a href="#">Svensson Harper</a>	<a href="#">Ultrafabrics Cove</a>	<a href="#">Yarwood Mustang*</a>	
<a href="#">Fidivi Radio</a>	<a href="#">Spradling Valencia</a>	<a href="#">Fidivi Laser J</a>	<a href="#">Svensson Rock</a>	<a href="#">Ultrafabrics Wired</a>		
<a href="#">Panaz Cadet</a>	<a href="#">Spradling Silvertex</a>	<a href="#">Fidivi Mini Melange</a>	<a href="#">Svensson Step</a>	<a href="#">Ultrafabrics Dwell</a>		
<a href="#">Panaz Highland</a>	<a href="#">Spradling Hitch</a>	<a href="#">Fidivi Spazio</a>	<a href="#">Warwick Calf</a>	<a href="#">Ultrafabrics Helix</a>		
	<a href="#">Spradling Vogue</a>	<a href="#">Kvadrat Atlas</a>	<a href="#">Warwick Liaison</a>	<a href="#">Svensson Be On</a>		
	<a href="#">Svensson Easy</a>	<a href="#">Kvadrat Remix 3</a>		<a href="#">Svensson Brink</a>		
	<a href="#">Svensson Hello</a>	<a href="#">Kvadrat Relate</a>		<a href="#">Svensson Ink</a>		
	<a href="#">Svensson Semi</a>	<a href="#">Panaz Harvard</a>		<a href="#">Svensson Tableau</a>		
	<a href="#">Svensson Tone</a>	<a href="#">Svensson Khaki</a>		<a href="#">Svensson Heritage</a>		
	<a href="#">Yarwood Dollaro</a>	<a href="#">Svensson Urban</a>		<a href="#">Svensson Softmil</a>		
	<a href="#">Warwick Plush</a>	<a href="#">Vescom Furka Plus</a>		<a href="#">Svensson Vy</a>		
	<a href="#">Warwick Ultra II</a>	<a href="#">Vescom Samar</a>		<a href="#">Vescom Bowen</a>		
	<a href="#">Warwick Lino</a>	<a href="#">Warwick Lovely</a>		<a href="#">Vescom Lani*</a>		
		<a href="#">Warwick Lustre</a>		<a href="#">Yarwood Style*</a>		
		<a href="#">Warwick Macrosuede</a>				
		<a href="#">Warwick Shagreen</a>				